


# Forced Air System

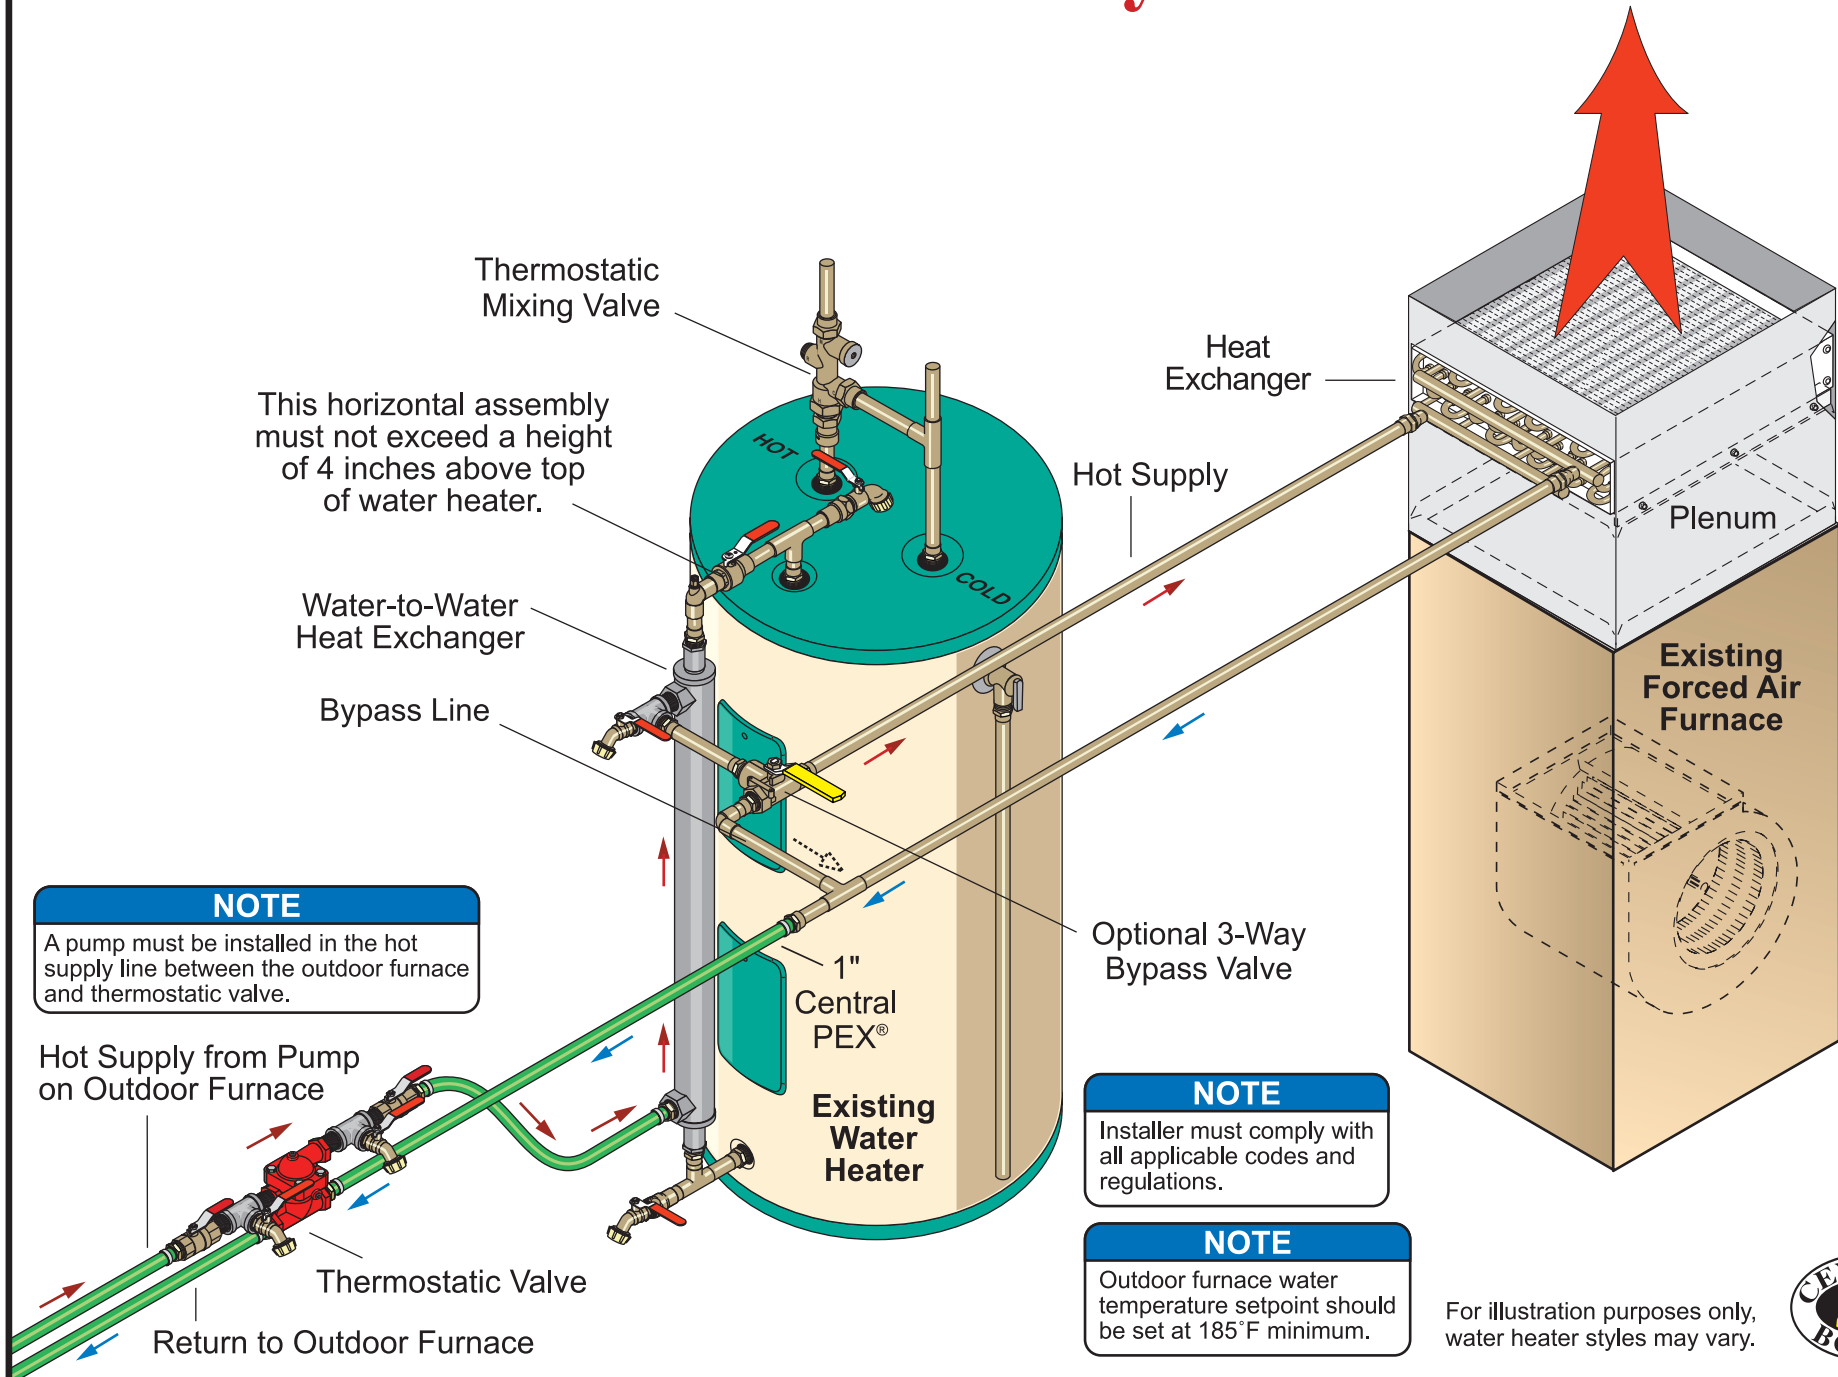

**NOTE**  
A pump must be installed in the hot supply line between the outdoor furnace and thermostatic valve.

**NOTE**  
Installer must comply with all applicable codes and regulations.

**NOTE**  
Outdoor furnace water temperature setpoint should be set at 185°F minimum.

For illustration purposes only, water heater styles may vary.

