


Standard Heat Pump

To Duct Work

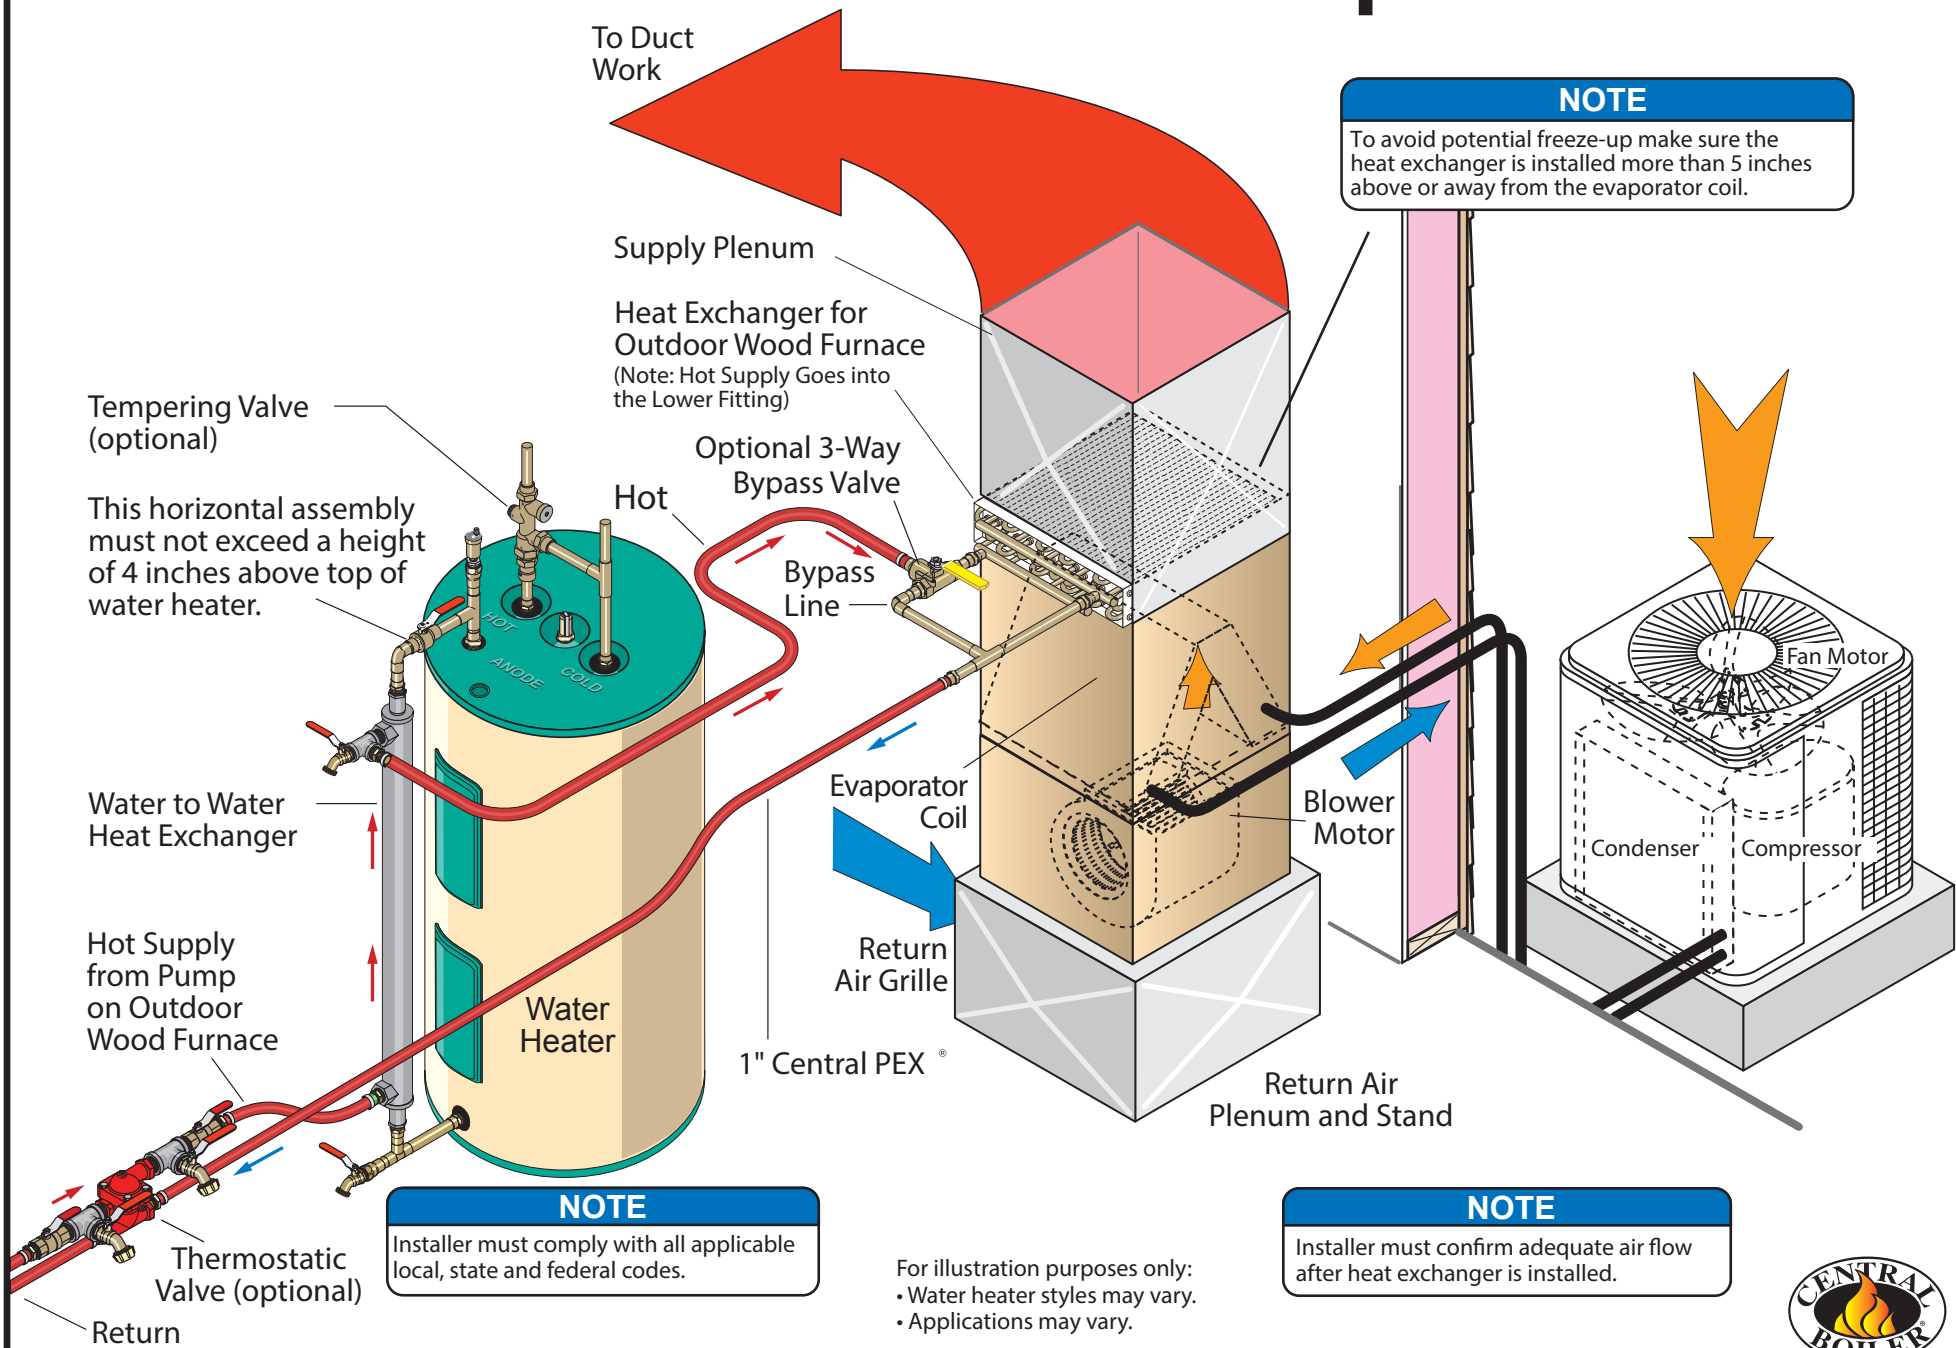

NOTE
To avoid potential freeze-up make sure the heat exchanger is installed more than 5 inches above and away from the evaporator coil.

NOTE
Installer must comply with all applicable local, state and federal codes.

For illustration purposes only:
• Water heater styles may vary.
• Applications may vary.

NOTE
Installer must confirm adequate air flow after heat exchanger is installed.

