Wiring Diagram Using a Zone Valve Wired Directly into the Control Box of the Furnace

