


Gas Water Heater Plate Exchanger / Mixing Valve

NOTE

Outdoor furnace water temperature setpoint should be set at 185°F minimum.

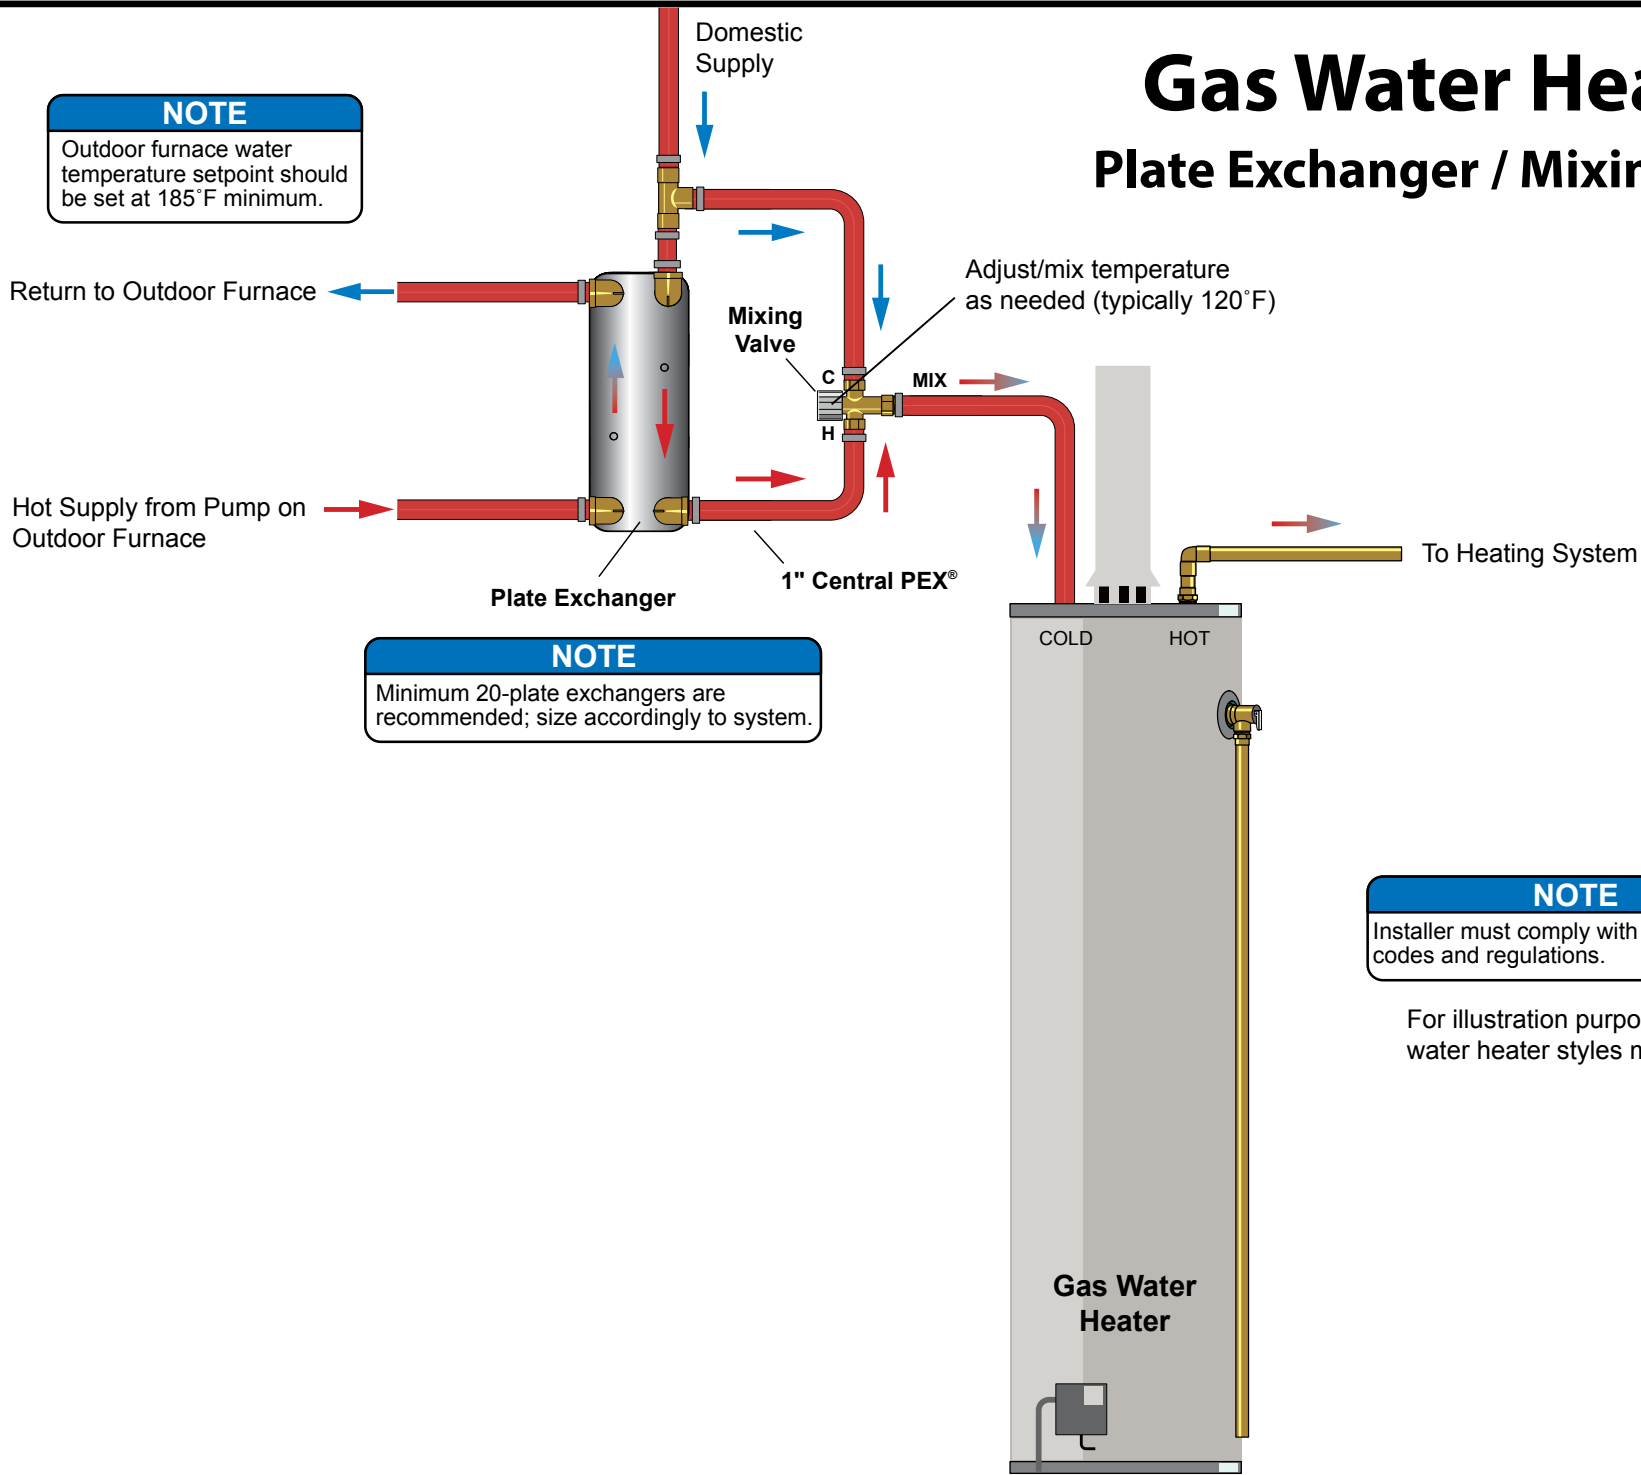

NOTE

Minimum 20-plate exchangers are recommended; size accordingly to system.

NOTE

Installer must comply with all applicable codes and regulations.

For illustration purposes only, water heater styles may vary.

