

Introducing the all-new Classic Edge 960 Titanium HDX



**CLASSIC
EDGE™**
TITANIUM HDX

CLASSIC EDGE 960 TITANIUM HDX

Tested Efficiency (LHV) - 92.1%*
Tested Efficiency (HHV) - 85.6%*
Mfr's Rated Heat Output Capacity -
400,000 Btu/hr

Firebox Volume - 32 cubic ft
Firebox Dimensions - 42.75"L x 43.5"H x 31.5"W
Door - 22.75"W x 28.75"H
Ash Cleanout Door - 20"W x 11"H
Water Capacity - 420 gallons
Weight - 2,714 lbs
One set of 1-1/4" Supply and Return Ports
Two sets of 3/4" Supply and Return Ports
Bypass Door and Alarm

Furnace Options and Accessories:
• LED Light Kits

Titanium-Enhanced Stainless Steel Firebox

Four color combinations to complement your landscape



Copper and Bronze



Green and Bronze




Charcoal and Bronze



Taupe and Bronze

Color selections are close representations but are limited due to print variations.

Classic Edge 960 (Foundation Optional)

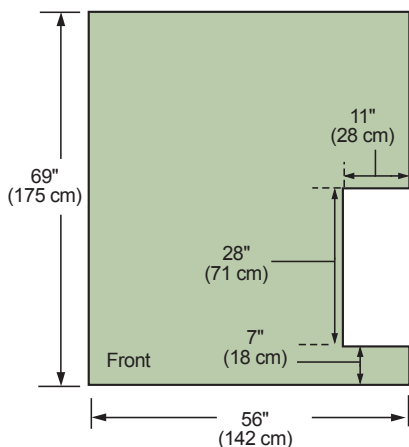

CAUTION

Do not use any combustible materials for the foundation.

Outdoor furnace must be installed on a noncombustible surface or foundation that incorporates an enclosure that will prevent supply and return lines from possible exposure to sunlight, fire, or physical damage that may be caused by an occurrence outside the outdoor furnace enclosure. Foundation may consist of concrete, crushed rock, or patio blocks.

© 2020 Central Boiler

*At the time of printing, the Classic Edge 960 HDX was pending U.S. EPA Certification for residential use. Please check with your Central Boiler dealer on the current status.

The Ultimate Wood Heat



**CLASSIC
EDGE™**
TITANIUM HDX



The FireStar® combustion controller constantly monitors how the wood is burning and adds air where and when it's needed for the cleanest, most efficient combustion.

Coal Bed Saver - saves the coal bed for quick, easy restarts


Burning Time Monitor - helps to estimate when you need to add wood

Clean Reload - Reduces smoke when you open the firebox door to add wood


Text Alerts - be notified when it's time to add wood

MyFireStar.com - the FireStar Controller with onboard Wi-Fi, Coal Bed Saver, Burning Time Monitor and Clean Reload keeps you informed of your furnace's performance and operations from anywhere.

When the fire needs a lot of air (such as during startup or when burning higher moisture wood), FireStar instructs the stepper motors to open the air regulating discs precisely to deliver the amount of air needed.

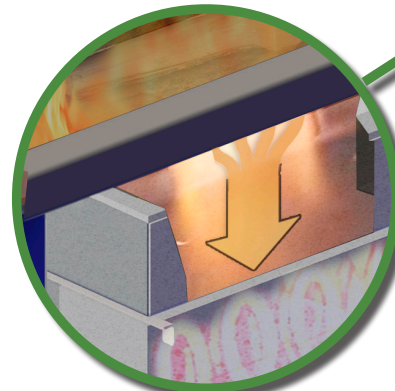


The patented Air Charge Tube keeps coals from falling into the Reaction Chamber and directs oxygen into the Fusion Combustor. It also helps the furnace to relight faster.

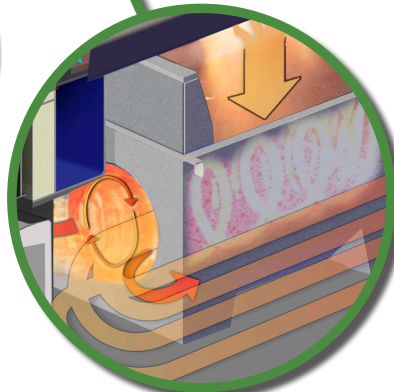


Super-heated gases enter the round chamber of the Afterburner and swirl in a turbulent vortex, creating a **fireball** and allowing enough time for complete combustion to occur.



The patented vertical Easy View® Heat Exchanger with hinged door provides full access without the use of tools.

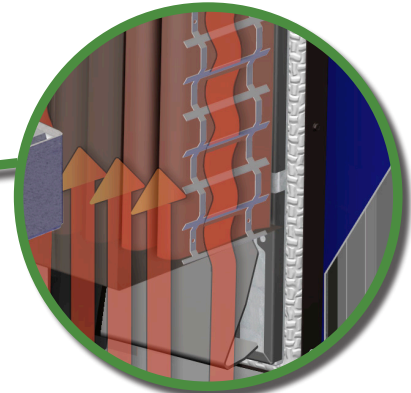

Turbulators in the heat exchanger cause turbulence of the exhaust gas flow through the exchanger. This forces the heated exhaust to better contact the heat exchanger and transfer more of its energy to the surrounding water jacket before exiting out the chimney.

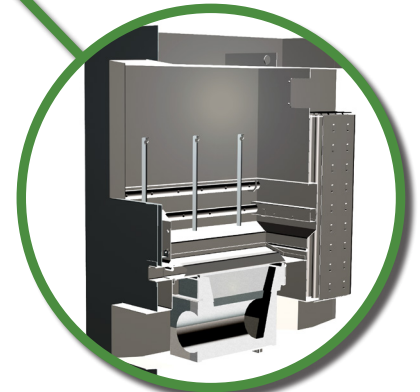

The Classic Edge's titanium-enhanced stainless steel firebox ensures zero corrosion inside the firebox from high-moisture wood, creosote or condensation.